



***baja designs***<sup>®</sup>  
*The Scientists of Lighting*

**Chevy, Silverado 1500 (14-16), 2500/3500 (15-16)**

**44-7844, 44-7843**

**Chevy, Silverado 2500/3500 (17)**

**44-7769**

**Fog Pocket Kit Instructions**



185 Bosstick Boulevard • San Marcos • CA • 92069

Phone 760-560-2252 • Fax 760-560-0383

info@bajadesigns.com • [www.bajadesigns.com](http://www.bajadesigns.com)



**baja designs**<sup>®</sup>  
The Scientists of Lighting

## LIMITED LIFETIME WARRANTY

Baja Designs proudly offers a LIFETIME WARRANTY against manufacturer's defect on all the products that we manufacture.

These are comprehensive warranties; other than the exclusions below – you're covered. If your LED or HID bulb burns out, you're covered. Additionally, cutting off our connector or changing your lenses does not automatically void your warranty.

### **Exclusions:**

Installation errors, abuse, misuse or crash damage. You must be the original owner of the product and can supply proof of purchase.

Baja Designs manufactures its own products as well as resells products manufactured by others. Baja Designs makes no express or implied warranties on products not manufactured by Baja Designs including without limitation any warranties or merchantability and fitness for a purpose. We will, however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties.

Baja Designs will pay the freight if your product is less than 90 days old, otherwise defective products must be returned to Baja Designs, Inc., freight prepaid. At our option, we will repair or replace items in question and return them at no charge. If the identical product is no longer available, we will replace with a similar product of equal value. Baja Designs Inc. will not be responsible for any indirect or consequential damages in connection with defective merchandise.

Items purchased through a Baja Designs authorized dealer must be returned through the dealer. Only available on LED auxiliary lights and product must be in sellable condition at MSRP. Product that has been damaged in any way after the original purchase date will be excluded from this guarantee.

### **Indemnification:**

**Buyer hereby acknowledges off-roading, racing and driving at night are dangerous activities and that the products and/or supplies purchased from Baja Designs are used in an inherently dangerous activity that may endanger life and limb; and in no event shall the seller, or seller's heirs and assigns, be held liable for consequential damages, nor shall seller's liability on any claim for damages arising out of or connected with the sale, delivery, or use of purchased products and/or supplies exceed the purchase price of the products and/or supplies**



## Ford (06-14) F-150, Toyota Tundra (07-13), Toyota Tacoma (05-11) 44-7103 Kit

### Tools Required

- Trim Tool
- 8mm, 7/16" wrench
- 8mm, 10mm, 7/16" socket


1. Using a trim tool, remove the 12x plastic clips mounting the radiator shroud plastic.




2. Using a 10mm socket, remove the 2x bolts mounting the top of the front grille.



3. Using a 10mm socket, remove the 2x forward facing bolts located behind the grille. Then gently pry on the locations shown to release the self-locking tabs.

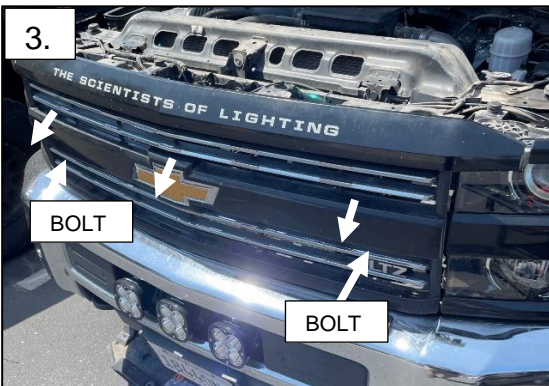


4. Attach both driver and passenger side brackets as shown.

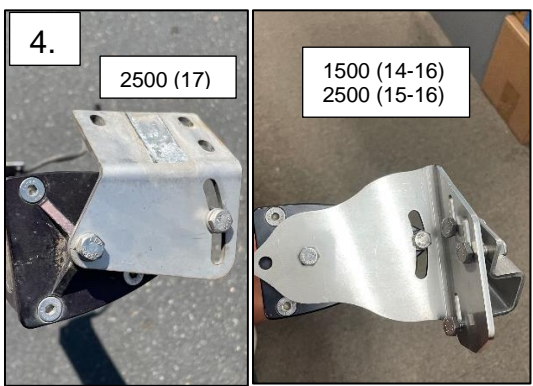

5. Begin to mount the light with the top portion of the bracket and 3x bolts.




6. Once both mounts are secure, ensure the light is level and angled to the desired location. Begin to route the wiring harness as shown.

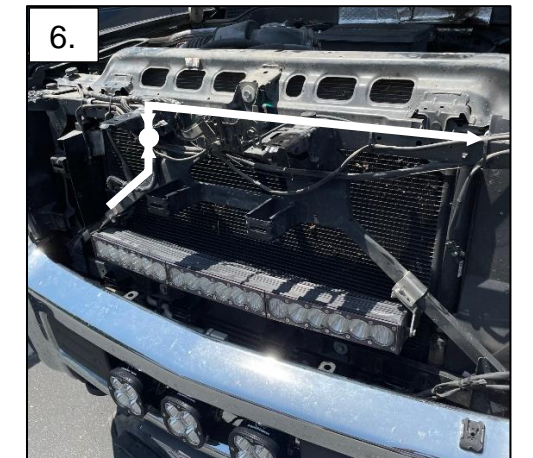





7. After running the harness along the radiator support. Route the wires behind the driver side headlight moving towards the battery.

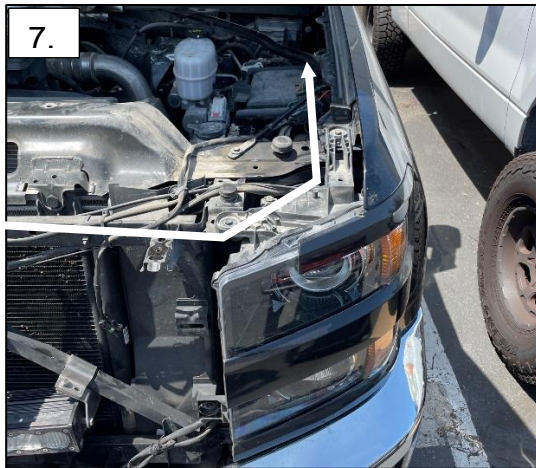


8. Using the terminals on the harness, connect the harness to the battery starting with the negative (black) terminal first.

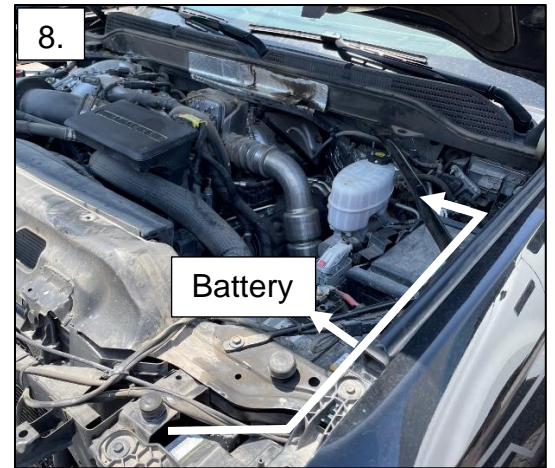


9. Located down behind the fuse block is a fire wall grommet. Route the switch through the dash here.

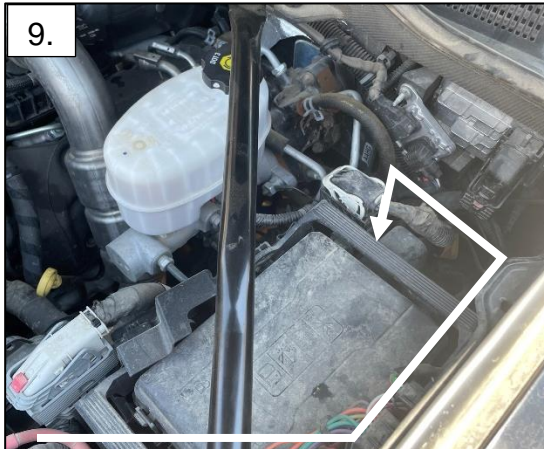

10. Under the dash, using a 8mm socket, remove the 3x nuts mounting the wiring box to create more room. Behind the box is the back side of the firewall grommet.

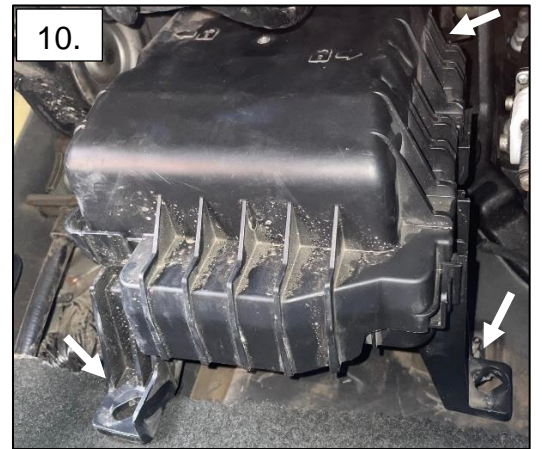

11. Once the wires are through the dash. Mount the switch in the suggested locations.

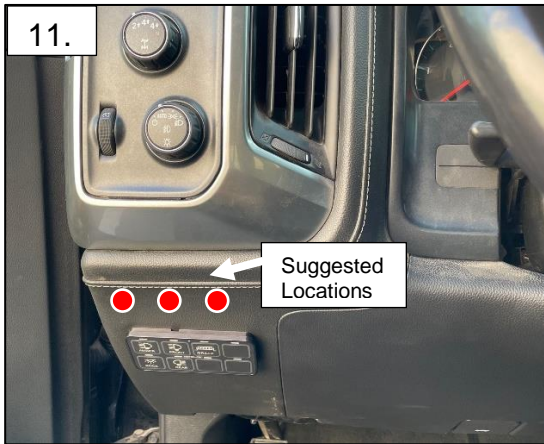

**Tie all wires away from sharp, hot, and/or rotating components.**

**Re-torque all the fasteners after 100 miles.**

**Your install is now complete! Thank you for choosing Baja Designs.**